



OPERATION


TO A USB-C CHARGER.



POWER BUTTON

*NOTE THE BLINDER 1300 IS PACKAGED IN DEMO-MODE.

TO ENABLE FULL FUNCTION OF THE LIGHT, CONNECT IT

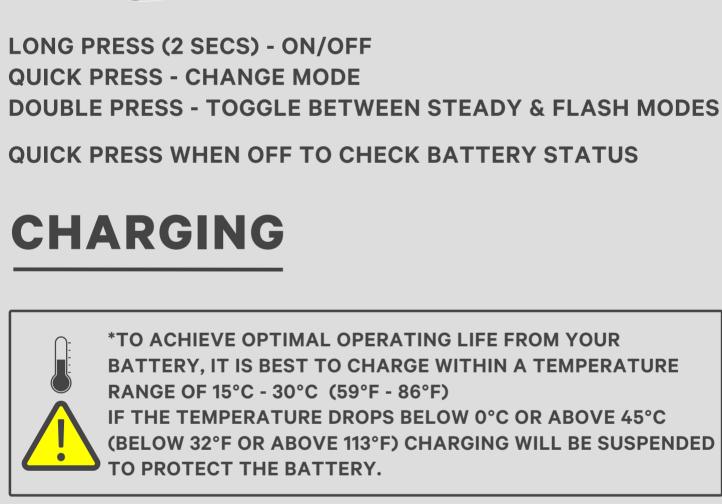

(BELOW 32°F OR ABOVE 113°F) CHARGING WILL BE SUSPENDED

LIFT THE CHARGING-PORT HATCH.





CHARGING MODE.



ONCE THE CHARGE CABLE IS INSERTED, THE POWER BUTTON

WILL GLOW AMBER INDICATING THE BLINDER IS NOW IN

MOUNTING

A QUICK PRESS OF THE POWER BUTTON WHEN THE LIGHT

IS SWITCHED OFF WILL INDICATE THE BATTERY STATUS.

50%

WHEN THE POWER BUTTON LIGHT IS FLASHING RED,

THE LIGHT'S OUTPUT WILL BE REDUCED TO 30% TO

25%

- 22.2 mm Ø BAR

- 26 mm Ø BAR

- 31.8 mm Ø BAR

10%



BAR DIAMETER.

100%

BAR MOUNT

75%

PRESERVE RUNTIME.

35 mm Ø BAR

SELECT THE CORRESPONDING HOLE TO SUIT YOUR



COMPLETE MOUNTING BY PULLING UP ON THE TAB

WHILE APPLYING DOWNWARD PRESSURE TO CLICK

MAKE SURE THE LIGHT IS SECURE BEFORE RIDING!

TO REMOVE, PRESS DOWN ON TAB & GENTLY PULL LIGHT

THE LIGHT INTO POSITION.

AWAY FROM CRADLE.

UNDER MOUNT

PLACE THE LIGHT IN THE CRADLE.

UN-LOCKED

UN-LOCKED.

LOCKED

PLACE THE LIGHT INSIDE THE MOUNT IN THE UN-LOCKED POSTION.

Elliger

LOCK THE UNDER-MOUNT.

MAKE SURE THE UNDER-MOUNT IS LOCKED BEFORE RIDING. DO NOT RIDE WITH THE UNDER-MOUNT UNLOCKED! REFER TO YOUR GO-PRO OR COMPUTER MOUNT INSTRUCTIONS TO COMPLETE BLINDER UNDER-MOUNT INSTALLATION. **MODES & RUNTIMES** MODE **LUMENS RUNTIME** 1.5hr High 1300 Medium 3hr 650 8hr Low 230 8hr 420 **Strobe** 16hr 230 120hr 150 Eco

DESIGNED BY KNOG

MELBOURNE, AUSTRALIA

2 YEAR WARRANTY

KNOG.COM

knog.